


TEABERRY STALKER ONE  
37 CHANNEL CAPABILITY

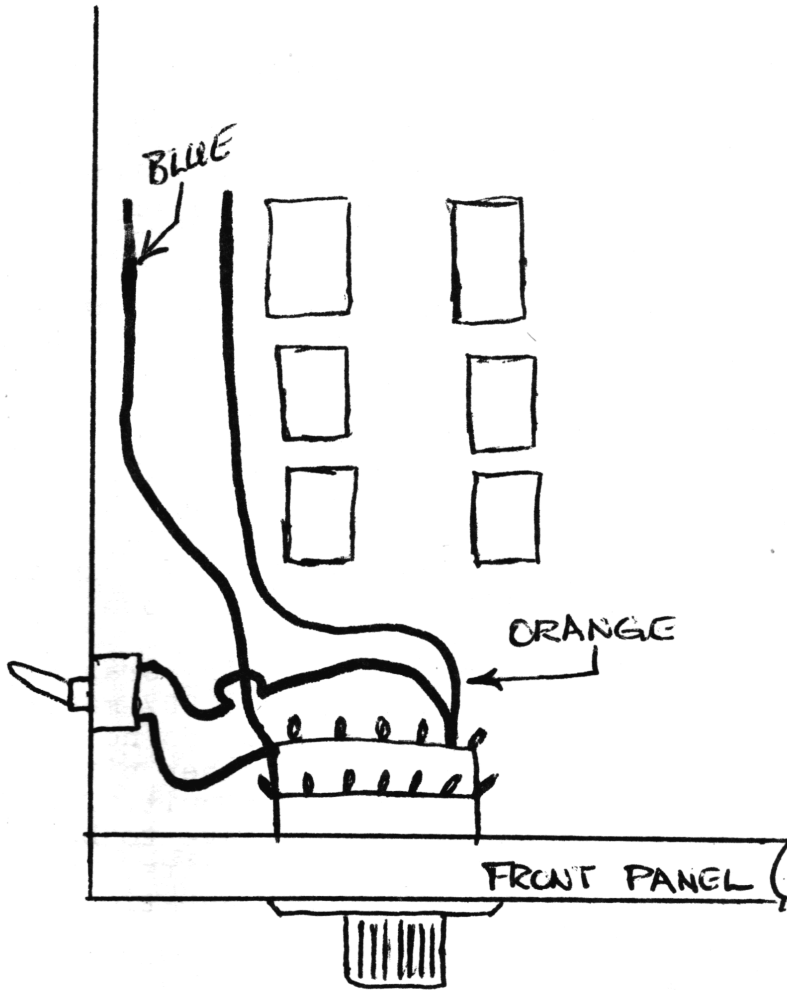

- (1) Remove the unit from its cabinet and locate the PLL selector box to the left side behind the channel selector.
- (2) Remove the cover from the box by pulling off the tape and prying its edges.
- (3) Mount a mini SPST switch in one of the two holes in the left side of the unit.
- (4) Solder two wires across the switch and solder one to the blue wire and the other to the orange wire on the channel selector, as shown.
- (5) Replace the cover to the box and retape it in place.
- (6) Cut out a small slot in the cover of the unit to allow the cover to slide over the switch.

NOTE: Using the switch, the unit can now operate from channel 10 to 23 on 14 new channels. See frequency chart below. This modification may not work on all models especially older sets because of new changes in PLL units.

CHANNEL	FREQUENCY	CHANNEL	FREQUENCY
10	27.275	17	27.365
11	27.285	18	27.375
12	27.305	19	27.385
13	27.315	20	27.405
14	27.325	21	27.415
15	27.335	22	27.425
16	27.355	23	27.455