


COBRA 140 GTL

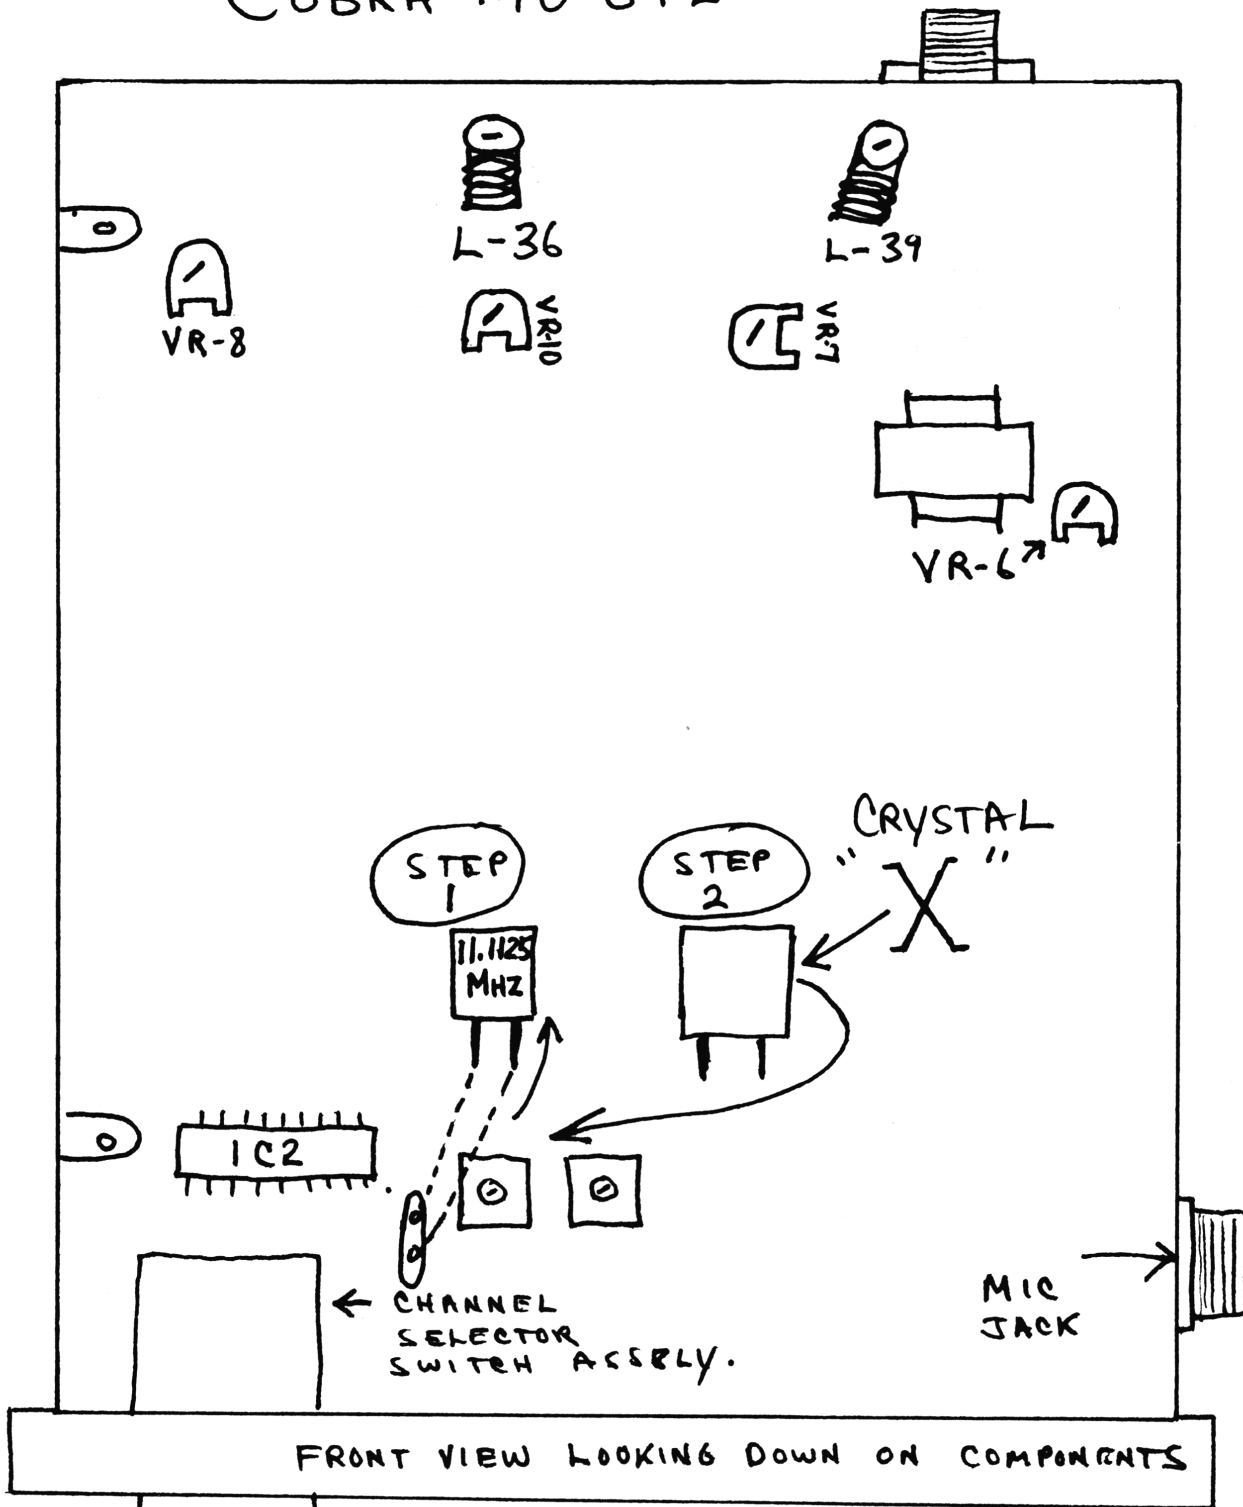

***WARNING: Do NOT USE THIS MODIFICATION IN THE U.S. (FOR EXPORT ONLY)**

STEPS:

- ① REMOVE 11.125 CRystal
- ② INSTALL OR USE CRystal SWITCH "X" CRystal.
- ③ NOTE: SEE FREQ. CHART.
- ④ CRystal "X" IS AN EXPERIMENTAL CRystal AVAILABLE AT SOME DISTR. AND CB SHOPS.

HIGH FREQUENCY CHART
COBRA 140GTL
WITH "X" CRYSTAL

<u>CHANNEL</u>	<u>FREQUENCY</u>	<u>CHANNEL</u>	<u>FREQUENCY</u>
1	27.485	21	27.735
2	27.495	22	27.745
3	27.505	23	27.775
4	27.525	24	27.755
5	27.535	25	27.765
6	27.545	26	27.785
7	27.555	27	27.795
8	27.575	28	27.905
9	27.585	29	27.915
10	27.595	30	27.925
11	27.505	31	27.935
12	27.525	32	27.945
13	27.535	33	27.955
14	27.545	34	27.965
15	27.555	35	27.975
16	27.575	36	27.985
17	27.585	37	27.995
18	27.595	38	27.905
19	27.705	39	27.915
20	27.725	40	27.925

TUNE-UP FOR COBRA 140GTL

Adjust L39 and L36 for best power and modulation.

VR6: AM power adjustment

VR8: SSB modulation adjustment

VR10: RF power meter adjustment

VR7: Mike gain adjustment