


BROWNING MKIV & MKIVA EXPANSION CONTINUED:

SWITCH IN THE DOWN POSITION:

1. 26.975	11. 27.135	21. 27.335	31. 27.495
2. 26.985	12. 27.145	22. 27.345	32. 27.505
3. 26.995	13. 27.155	23. 27.355	33. 27.515
4. 27.325	14. 27.485	24. 27.325	34. 27.485
5. 27.335	15. 27.495	25. 27.335	35. 27.495
6. 27.345	16. 27.505	26. 27.345	36. 27.505
7. 27.355	17. 27.515	27. 27.355	37. 27.515
8. 27.045	18. 27.205	28. 27.405	38. 27.565
9. 27.055	19. 27.215	29. 27.415	39. 27.575
10. 27.125	20. 27.325	30. 27.485	40. 26.965

MKIV, IVA TRANSMITTER

Make up and install in a convenient location a switch as shown using a DPDT center off, miniature toggle switch.

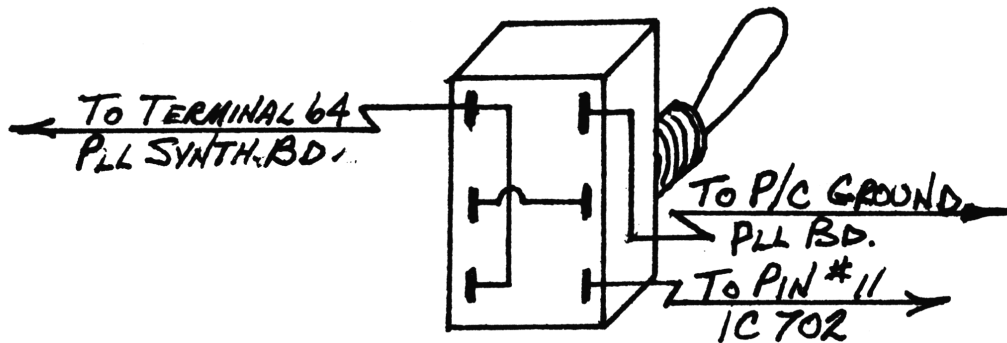

NEW SWITCH IN UP POSITION:

1. 26.965	11. 26.795	21. 26.895	31. 26.995
2. 26.975	12. 26.805	22. 26.905	32. 27.005
3. 26.985	13. 26.815	23. 26.915	33. 27.015
4. 27.005	14. 26.825	24. 26.925	34. 27.025
5. 27.015	15. 26.835	25. 26.935	35. 27.035
6. 27.025	16. 26.845	26. 26.945	36. 27.045
7. 27.035	17. 26.855	27. 26.955	37. 27.055
8. 27.055	18. 26.865	28. 26.965	38. 27.065
9. 27.065	19. 26.875	29. 26.975	39. 27.075
10. 27.075	20. 26.885	30. 26.985	40. 27.405

CENTER NORMAL CHANNELS


MKIV, IVA TRANSMITTER CONTINUED:

SWITCH POSITION DOWN:

1.	26.965	11.	27.405	21.	27.535	31.	27.635
2.	26.975	12.	27.425	22.	27.545	32.	27.645
3.	26.985	13.	27.435	23.	27.575	33.	27.655
4.	27.005	14.	27.445	24.	27.555	34.	27.665
5.	27.015	15.	27.455	25.	27.565	35.	27.675
6.	27.025	16.	27.475	26.	27.585	36.	27.685
7.	27.035	17.	27.485	27.	27.595	37.	27.695
8.	27.055	18.	27.495	28.	27.605	38.	27.705
9.	27.065	19.	27.505	29.	27.615	39.	27.715
10.	27.075	20.	27.525	30.	27.625	40.	27.405

HOW TO MAKE YOUR EAGLE SCREAM

So you bought a new Browning Eagle, and it won't scream. OK, here's how. Remove the bottom cover and mount a 3 position rotary switch in a convenient place on the back apron, and install the new parts as shown:

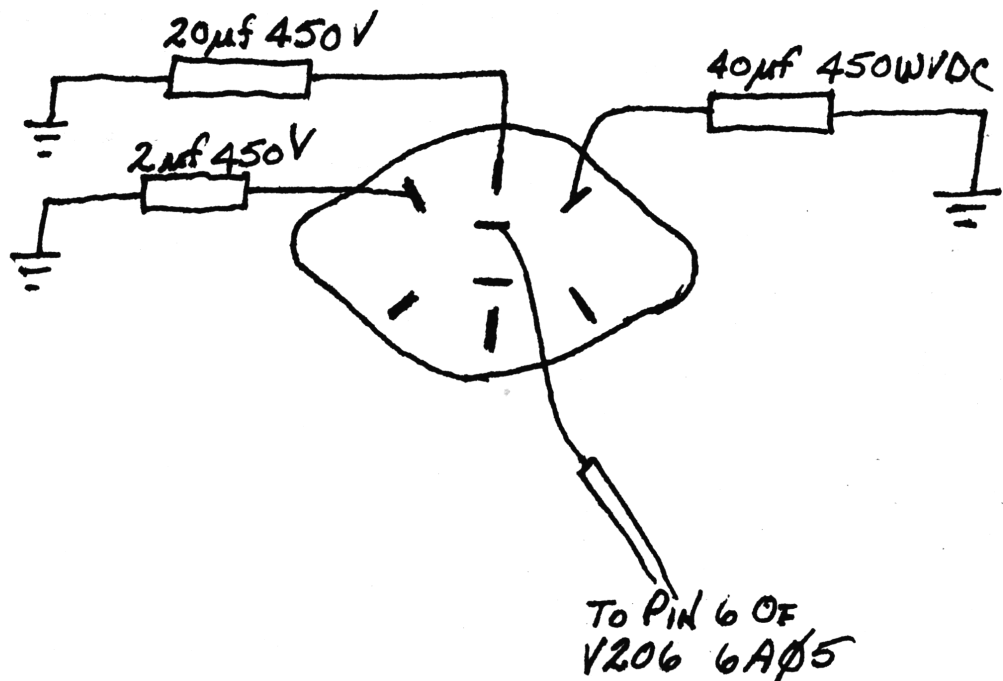

This will allow you two lengths of ping. Be sure to switch back to stock for SSB.