

COBRA 50XLR/55XLR (MB8719 PLL)

A-Open Pin 10

B-Open Pins 10 and 11

C-Open Pin 10, and Pin 10 tied to Pin 17

Frequency Chart starts at selector position 16 (NO error)....

<u>Channel Selector</u>	<u>A</u>	<u>B</u>	<u>C</u>
16	26.515	26.835	27.795
17	26.525	26.845	27.805
18	26.535	26.855	27.815
19	26.545	26.865	27.825
20	26.565	26.885	27.845
21	26.575	26.895	27.855
22	26.585	26.905	27.865
23	26.615	26.935	27.895
24	26.595	26.915	27.875
25	26.605	26.925	27.885
26	26.625	26.945	27.905
27	26.635	26.955	27.915
28	26.645	1	27.925
29	26.655	2	27.935
30	26.665	3	27.945
31	26.675	26.995	27.955
32	26.685	4	27.965
33	26.695	5	27.975
34	26.705	6	27.985
35	26.715	7	27.995
36	26.725	27.045	28.005
37	26.735	8	28.015
38	26.745	9	28.025
39	26.755	10	28.035
40	26.765	11	28.045