


KIT #146 FREQUENCY CHART

Frequency correlation is referenced to the switch mounting position shown in drawing:

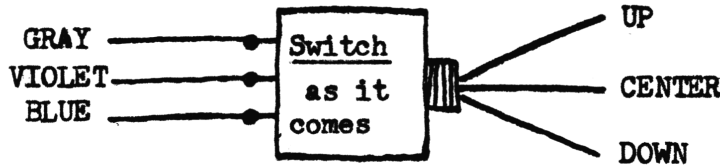

SW. DOWN -	SELECTOR -	FREQUENCY	SW. UP -	SELECTOR -	FREQUENCY
	1	27.285		1	27.605
	2	27.295		2	27.615
	3	27.305		3	27.625
	4	27.325		4	27.645
	5	27.335		5	27.655
	6	27.345		6	27.665
	7	27.355		7	27.675
	8	27.375		8	27.695
	9	27.385		9	27.705
	10	27.395		10	27.715
	11	27.405		11	27.725
	12	27.425		12	27.745
	13	27.435		13	27.755
	14	27.445		14	27.765
	15	27.455		15	27.775
	16	27.475		16	27.795
	17	27.485		17	27.805
	18	27.495		18	27.815
	19	27.505		19	27.825
	20	27.525		20	27.845
	21	27.535		21	27.855
	22	27.545		22	27.865
	23	27.575		23	27.895
	24	27.555		24	27.875
	25	27.565		25	27.885
	26	27.585		26	27.905
	27	27.595		27	27.915
	28	27.605		28	27.925
	29	27.615		29	27.935
	30	27.625		30	27.945
	31	27.635		31	27.955
	32	27.645		32	27.965
	33	27.655		33	27.975
	34	27.665		34	27.985
	35	27.675		35	27.995
	36	27.685		36	28.005
	37	27.695		37	28.015
	38	27.705		38	28.025
	39	27.715		39	28.035
	40	27.725		40	28.045