#### OPERATING INSTRUCTIONS

#### RECEIVER OPERATION

- 1. Set the RF GAIN to MAX and the AUTO NOISE LIMITER to OFF. Set the CB/PA switch to CB position. Set the CHANNEL SELECTOR to any desired channel except channel 9.
- 2. Rotate the VOLUME CONTROL to approximately 3/4 of its position and the SQUELCH CONTROL full CCW position. After receiving a signal reset the VOLUME CONTROL to a comfortable position and the SQUELCH CONTROL as described under Function of Controls.
- 3. As you rotate the CHANNEL SELECTOR you will hear incoming signals on some channels. By observing the S/RF Meter the signal strength of these signals may be noted.

NOTE: A signal strength of 9 indicates a strong local signal; a signal strength of 2 or 3 indicates a weak signal or a distant station.

#### TRANSMITTER OPERATION

- 1. After selecting a clear channel or waiting for an opportunity to "break-in", press the PRESS-TO-TALK switch on the microphone and observe that the S/RF Meter indicates a signal is being sent out.
- 2. While holding the PRESS-TO-TALK switch, hold the microphone at approximately 45 degree angle and about 2 inches from the mouth. Speak distinctly and clearly into the microphone when making a two-way communication over the air. When calling a mobile unit, for an example, there is a good chance the driver will be more interested in his driving than listening to the CB radio, therefore, it is important that your message is understood clearly.
- 3. When calling another station, do not speak for more than two minutes without making a break and listen for the reply. Never break-in on another conversation unless it is an emergency.

#### CRYSTAL SYNTHESIS

Your RENEGADE is equipped with crystals for all 23 transmit and receive frequencies assigned to the Citizens Radio Service.

Frequency selection is determined by the "synthesis" technique; that is 12 crystal frequencies are selectively mixed to provide 23 transmit and receive frequencies.

### SERVICE AND MAINTENANCE

THE FCC RULES AND REGULATIONS, PART 95, REQUIRES THAT ONLY PERSONS POSSESSING A VALID FIRST OR SECOND CLASS RADIOTELE-PHONE OPERATOR'S LICENSE ARE ALLOWED TO MAKE ADJUSTMENTS OR REPAIRS TO THE TRANSMITTING SECTION OF THIS TRANSCEIVER.

MODIFICATION TO THE TRANSMITTER SECTION IN ANY WAY NOT RECOM-MENDED BY FANON/COURIER CORPORATION IS ILLEGAL. MODIFICA-TIONS INCLUDE, BUT ARE NOT LIMITED TO, SUBSTITUTION OF CRYSTALS, REPLACEMENT OF COMPONENT PARTS NOT OF THE SAME ELECTRICAL RATING, ADDITION OF ANY COMPONENT PART(S), CONNEC-TIONS, DEVICE OR ACCESSORY INTERNALLY OR EXTERNALLY TO THE TRANSMITTER.

Should your unit require service for any reason, please refer to the enclosed <u>Authorized Warranty Station List</u> for assistance and location in your area.

Troubleshooting assistance may be obtained by writing to FANON/COURIER Corporation, 990 South Fair Oaks Avenue, Pasadena, California 91105. Address your inquiry to the attention of the Customer Service Department. Always state the Model, Serial Number and Issue of Schematic Diagram to which the unit was built. The schematic issue letter may be found in the lower right hand corner of the schematic or from the legend on the printed circuit board.

When ordering parts, refer to the part number listed in the Replacement Parts List and give a description of the part.

Mail to the attention of Parts Department.

# SPECIAL REPLACEMENT PARTS LIST

SYMBOL	DESCRIPTION	PART NUMBER				
	SOLID STATE DEVICES					
TR1,2,13 TR3,4,5,10,	Transistor, 2SC1908-4 " 2SC1908-3	2051-01 2051-02				
TR6,14 TR7 TR8,9 TR18 TR19 TR20 D1,2,6,	" 2SC631A-8 " 2SC1474-2-3 " 2SC1061 (B) " 2SC756-2-4 " 2SC1126 (A) " 2SC1908-4 Diode, IN4148	2051-03 2051-04 2051-05 1080-05 2051-06 2051-07 2019-45				
D3,4,5, 10,11,12	" IN60	294-42-9				
D8 D9,14	" IN960 Zener " IN4002	2051-08 2010-02				
	CRYSTALS					
	23.290 MHz 23.340 " 23.390 " 23.440 " 23.490 " 23.540 " 14.950 " 14.960 " 14.970 " 14.990 " 11.275 " 11.730 "	1080-153 1080-154 1080-155 1080-156 1080-157 1080-158 1080-159 1080-160 1080-161 1080-162 1080-163 1080-164				
	COILS AND TRANSFORMERS					
T1 T2 T3 T4 T5 T6,7	Coil, RF 27 MHz 10mm Yellow RF 27 MHz 10mm Yellow IFT 11.25 MHz 10mm Blac IFT 11.25 MHz 10mm Blac IFT 455 kHz 10mm Yellow IFT 455 kHz 10mm White	k 1080-14				

# SPECIAL REPLACEMENT PARTS LIST (Continued)

SYMBOL	DESCRIPTION	PART NUMBER		
	COILS AND TRANSFORMERS (Continue	ed)		
T8 T9 T10 T11 T12,13 T14 T15,16 T17 L1 L2,3,11 L4 L5,6 L7,13 L8 L9 L10 L12 L14	Coil, IFT 455 kHz 10mm Black Input Transformer EI-19 Output Transformer EI-28 Coil, Osc. 10mm Green "RF Filter "RF Filter "RF Filter "RF Filter "Trap Value Fix Inductor A.F. Choke EI-19 RF Coil, Green Ant. Coupling Coil Ant. Coupling Coil RF Tank Coil RF Tank Coil RF Tank Coil	1080-17 2051-34 2051-35 1080-18 1080-19 1080-139 1043-22 1043-23 1080-25 1080-27 1080-28 1080-26 2051-37 1043-26 1045-24 1080-22 1080-23 CH-4		
	CONTROLS			
VR1,6,7 VR3 VR5 VR10 VR2 VR4 S2 S3,4	Preset Resistor 30K ohm " " 50K " " 500 " " 10K " Squelch Control 50K (B) Volume Control 10K (A) Channel Selector Switch Slide Switch 2P 2T	1079-19 1080-32 2051-38 2052-33 1080-31 1080-29 1080-63 1080-136		
	FILTERS			
	Ceramic Filter LF-B6 455 kHz	1079-12		
C11 C19,45,46	Ceramic, 1pF ±0.5pF '' 2pF '' '' 3pF ''	2051-17 2051-18 1014-92		

# SPECIAL REPLACEMENT PARTS LIST (Continued)

SYMBOL	DESCRIPTION			PART NUMBER			
	CAPACITORS (Continued)						
C4,17,47, 74,76	Ceramic,	3pF	±0.5pF	1014-92			
C40,75	11	5pF	11	1014-94			
C49,75	11	10pF	±10%	1080-44			
C68,113	11	25pF	11	1080-45			
C1	**	33pF	**	1080-46			
C43,67,	11	50pF	11	160-86-9			
98,102		oop.		200 00 0			
C23,39,84	**	100pF	**	1080-48			
C8,99	**	150pF	**	1042-156			
C48,62,65,	**	220pF	***	1080-49			
87		F-					
C94	11	250pF	11	1080-50			
C50,61,64,	**	500pF	11	160-96-9			
120		P-					
C14	**	500pF	" N1200	2051-19			
C90	**	33pF	'' NPO	2051-20			
C85	**	47pF	11 11	2051-21			
C70,73,95	**	100pF	11 11	2051-22			
C71	**	150pF	11 11	2051-23			
C59	**	.001mfd	±20%	2051-24			
C26	**	.002mfd	11	2051-25			
C31,105,	**	.005mfd	11	2051-26			
106,117							
C2,3,5,6,	**	.01mfd +	80%(-)20%	2051-27			
9,24,41,42,			. ,				
44,51,54,							
63,66,69,							
72,78,83,		*					
89,91,101,							
109,111,114,							
116,118,119							
C10,15,18,	**	.04mfd	11 11	2051-28			
81,82,86,							
88,92,93,							
96,97,100,							
103							
C77	"	.1mfd	" "	2051-29			

### SPECIAL REPLACEMENT PARTS LIST (Continued)

SYMBOL	DESCRIPTION			PART NUMBER	
	CAPACITORS (Continued)				
C27	Electro- lytic	.47mfd	16V	1080-133	
C28,29,52, 107	"	1mfd	**	170-101	
C25,32,53, 56	"	10mfd	10V	1080-58	
C79,115	11	10mfd	16V	1042-129	
C108	**	33mfd	11	170-48-9	
C22	**	47mfd	10V	1080-59	
C30,34,55	11	100mfd	11	1080-60	
C35	**	100mfd	16V	1042-127	
C80	**	470mfd	"	1042-124	
C7,12,13, 20,36,37, 58,153	Mylar	.01mfd	±20%	2051-30	
C57	**	.02mfd	11	2051-31	
C16,21	**	.04mfd	11	2051-32	
C33,38,60	**	.1mfd	"	2051-33	
	MISCELLANEOUS				
F1	Fuse 1.5 Amp. Knob, Channel Selector Knob, Volume Microphone Assy.			1080-67 1080-77 1080-78 1080-146	
	Mounting Bracket				
	Power Cor	1001-48			
PL1,2	Pilot Lam	1079-54			
R95	Speaker, 3W 16 ohm 1080				
M	S/RF Mete	r 4A-26		1080-65	

### CITIZENS BAND "IO-CODE"

```
10 - 1
        Signal weak
10-2
        Signal good
10 - 3
        Stop transmitting
10 - 4
        Affirmative
10-5
        Relay (to)
10-6
        Busy
10 - 7
        Out of service
10 - 8
        In service-subject to call
10 - 9
        Say again
10 - 10
        Negative
10-11
        On duty
10-12
        Stand by (stop)
        Existing conditions
10-13
10 - 14
        Message-information
10-15
        Message-delivered
10-16
        Reply to message
10 - 17
        Enroute
10-18
        Urgent
        (In) contact
10 - 19
10 - 20
        Location
        Call (--) by phone
10 - 21
10-22
        Disregard
10 - 23
        Arrived at scene
10 - 24
        Assignment completed
10 - 25
        Report to (meet)
10-26
        Estimated arrival time
10 - 27
        License/permit information
10-28
        Ownership information
10-29
         Records check
        Danger/caution
10 - 30
10 - 31
        Pick up
        Units needed
10 - 32
10 - 33
        Help me quick
10 - 34
        Time
```

# NOTES

# NOTES

#### LIMITED WARRANTY

FANON/COURIER CORPORATION warrants each new electronic product manufactured by it to be free from defective material and workmanship and agrees to remedy any such defect or to furnish a new part (at the Company's option) in exchange for any part of any unit of its manufacture which under normal installation, use and service disclosed such defect; provided the unit is delivered by the owner to us or to our authorized distributor from whom purchased, or authorized service station, intact, for our examination, with all transportation charges prepaid to our factory, within 90 days from the date of sale to original purchaser and provided that such examination discloses, in our judgment, that it is thus defective.

Written authorization must be obtained before any merchandise is returned to the factory.

This warranty does not extend to any of our electronic products which have been subjected to misuse, neglect, accident, incorrect wiring not our own, improper installation, unauthorized modifications, or to use in violation of instructions furnished by us, nor units which have been repaired or altered outside of our factory, nor to cases where the serial number thereof has been removed, defaced or changed.

This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for us any other liability in connection with the sale of our electronic products.

#### **FANON/COURIER CORPORATION**



990 SOUTH FAIR OAKS AVENUE PASADENA, CALIFORNIA 91105 SUBSIDIARY OF RESDEL INDUSTRIES