


SCHEMATIC DIAGRAM

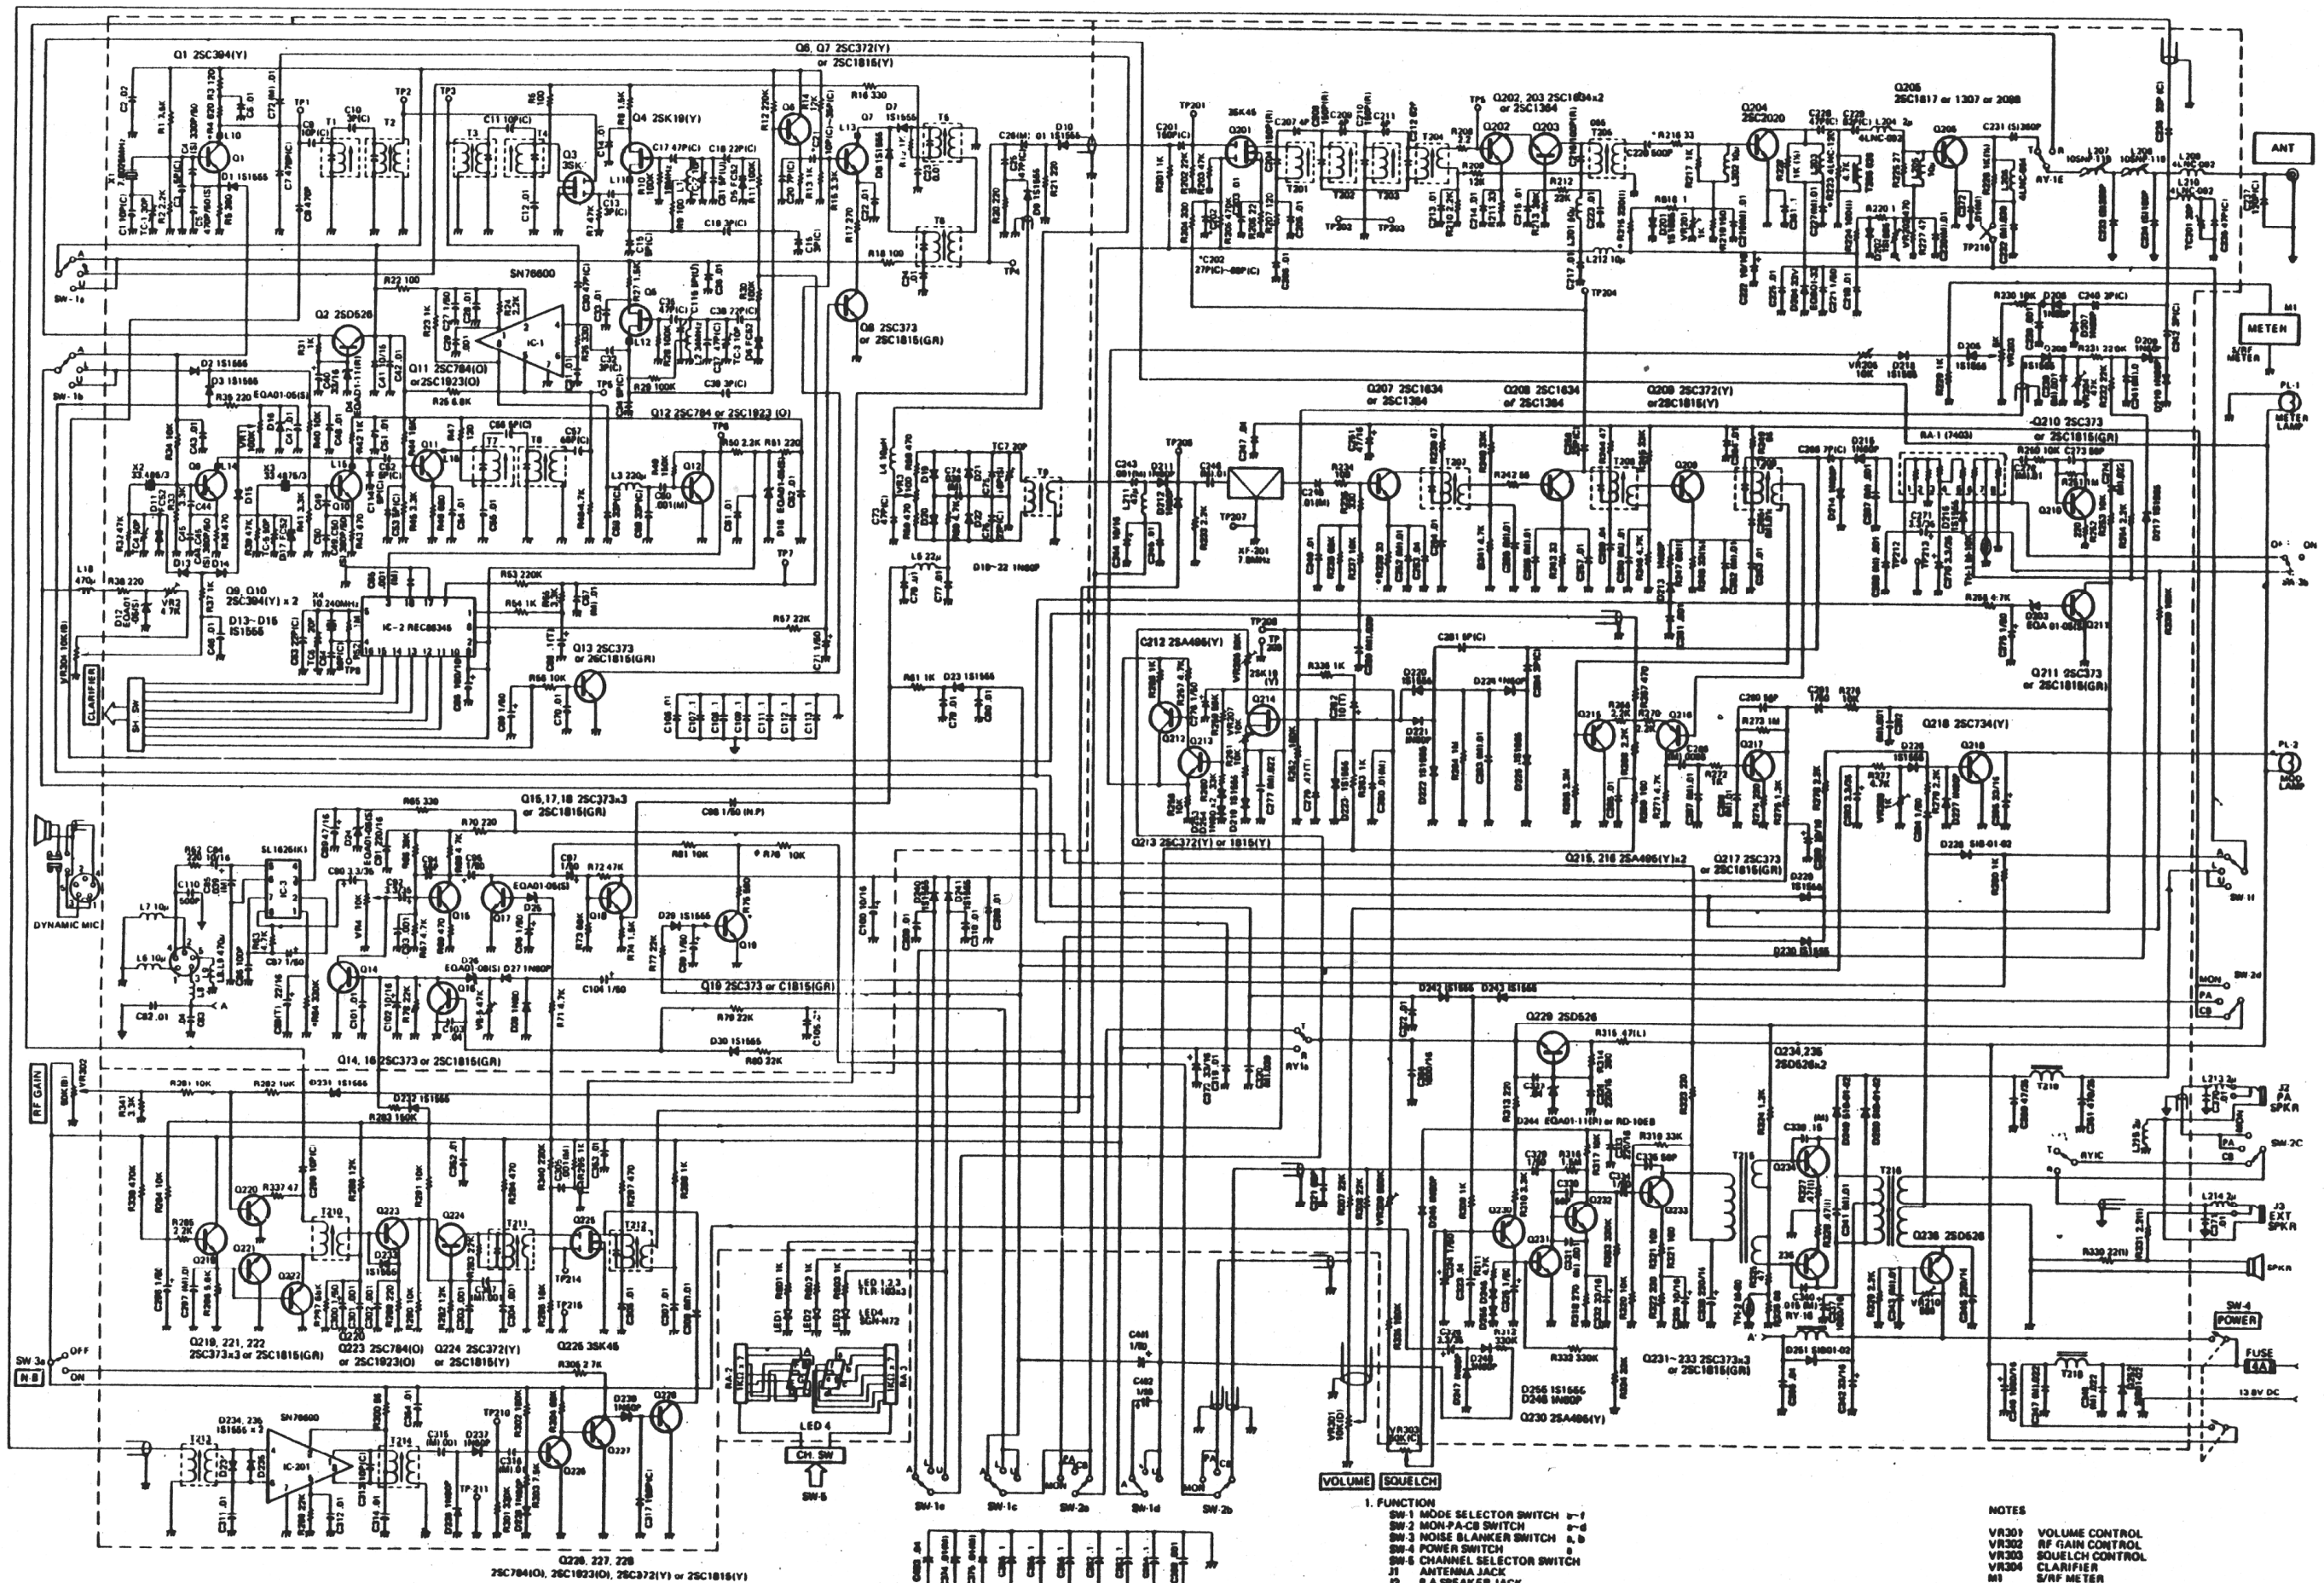

1. FUNCTION
- SW-1 MODE SELECTOR SWITCH a-1
 - SW-2 MON-PA-CB SWITCH a-2
 - SW-3 NOISE BLANKER SWITCH a-3
 - SW-4 POWER SWITCH a-4
 - SW-5 CHANNEL SELECTOR SWITCH a-5
 - J1 ANTENNA JACK
 - J2 P.A. SPEAKER JACK
 - J3 EXTERNAL SPEAKER JACK
 - J4 MICROPHONE JACK
2. RESISTANCE VALUES IN OHMS (K=1000, M=1000K)
3. CAPACITANCE VALUES IN μ F (μ = MICRO)
4. RATING OR TYPE NUMBER OF COMPONENT PARTS ARE SUBJECT TO CHANGE FOR IMPROVEMENT WITHOUT NOTICE
5. * NOT ALWAYS USED

- NOTES
- VR301 VOLUME CONTROL
 - VR302 RF GAIN CONTROL
 - VR303 SQUELCH CONTROL
 - VR304 CLARIFIER
 - M1 S/F METER
 - PL-1 METER INDICATOR
 - PL-2 MOD./TRANSMIT INDICATOR
 - LED 1 AM SECTION INDICATOR
 - LED 2 LSB SECTION INDICATOR
 - LED 3 USB SECTION INDICATOR
 - LED 4 CHANNEL INDICATOR