# This Information Is Provided By

# CBTricks.com

### Royce 1-655 Service Manual

Liability of damages to any equipment is the sole responsibility of the user! Downloading, viewing, or using any information provided on these pages automatically accepts the user to the terms of this agreement!

#### Modifications are provided for information purposes only!

Supporters of CBTricks.com paid for the hosting so you would have this file.

CBTricks.com is a non-commercial personal website was created to help promote the exchange of service, modification, technically oriented information, and historical information aimed at the Citizens Band, GMRS (CB "A" Band), MURS, Amateur Radios and RF Amps.

CBTricks.com is not sponsored by or connected to any Retailer, Radio, Antenna Manufacturer or Amp Manufacturer, or affiliated with any site links shown in the links database. The use of product or company names on my web site is not endorsement of that product or company.

The site is supported with donations from users, friends and selling of the Site Supporters DVD's to cover some of the costs of having this website on the Internet instead of relying on banner ads, pop-up ads, commercial links, etc. Thus I do not accept advertising banners or pop-up/pop-under advertising or other marketing/sales links or gimmicks on my website.

ALL the money from donations is used for CBTricks.com I didn't do all the work to make money (I have a day job). This work was not done for someone else to make money also, for example the ebay CD sellers.

All Trademarks, Logos, and Brand Names are the property of their respective owners. This information is not provided by, or affiliated in any way with any radio or antenna Manufacturers.

Thank you for any support you can give.

For information on how to Support CBTricks.com <a href="http://www.cbtricks.com/support/">http://www.cbtricks.com/support/</a>




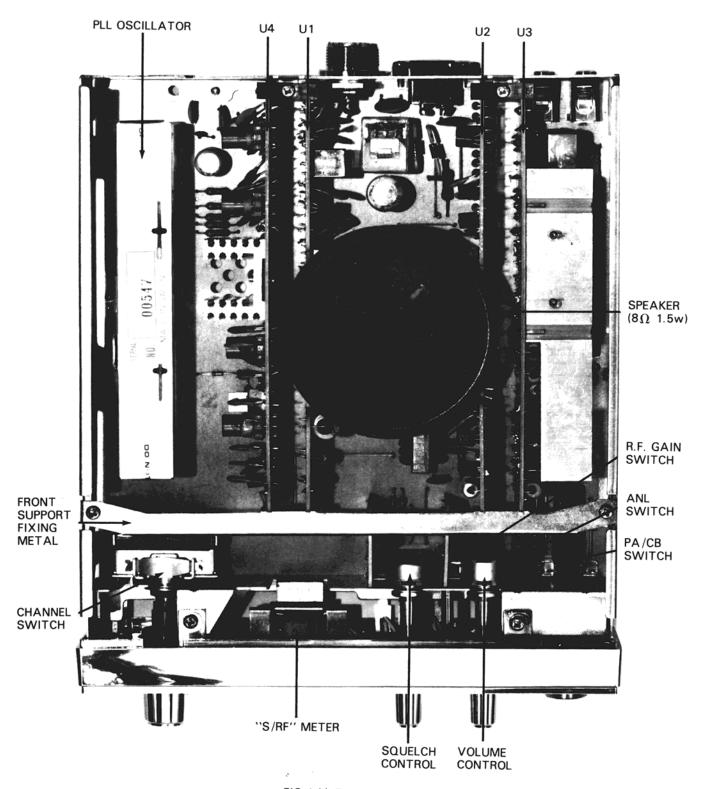


FIG 1 (Δ TUNE not shown)

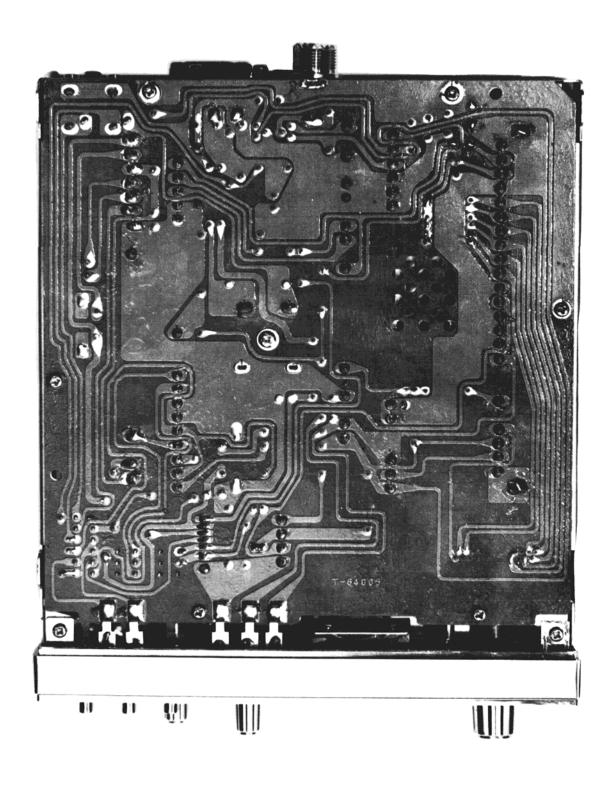



**TOP VIEW 1-655** 

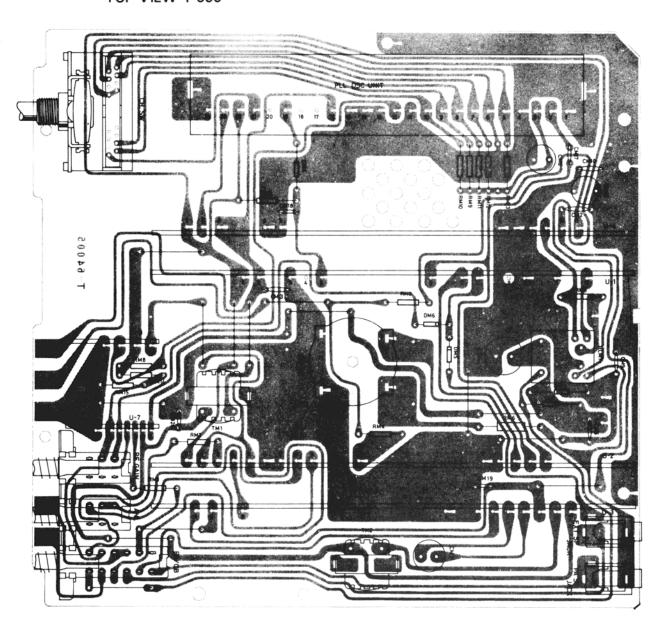

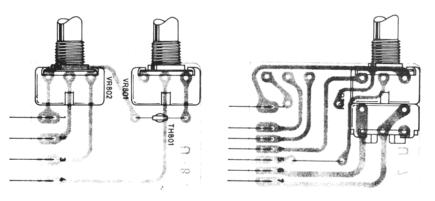



BACK VIEW 1-655

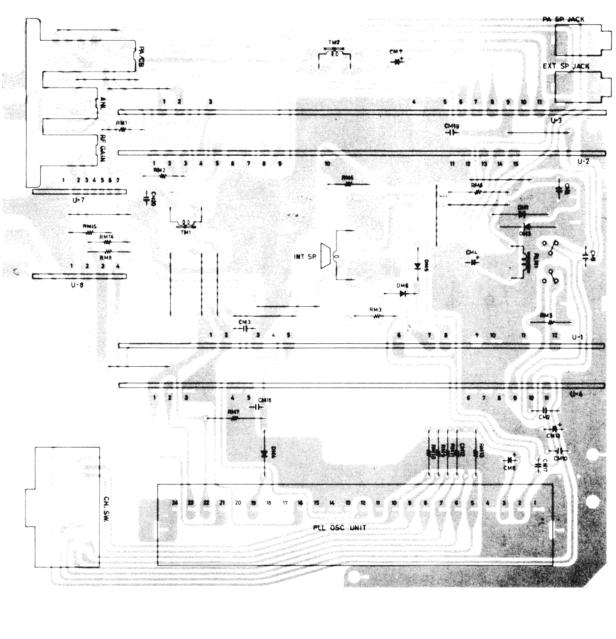

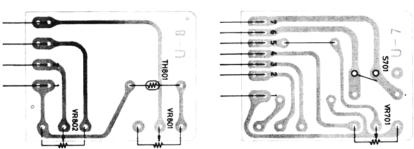

# TROUBLE-SHOOTING CHART

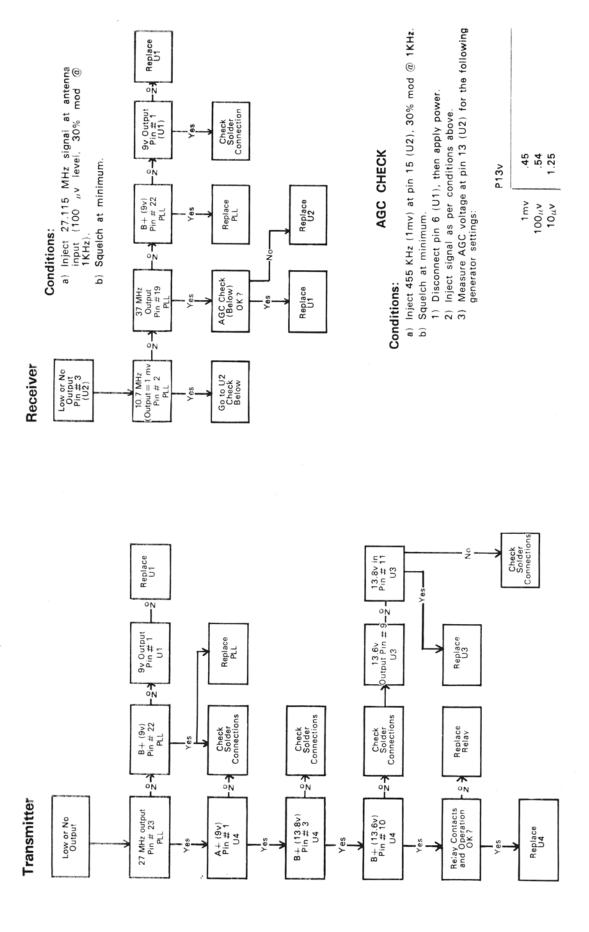

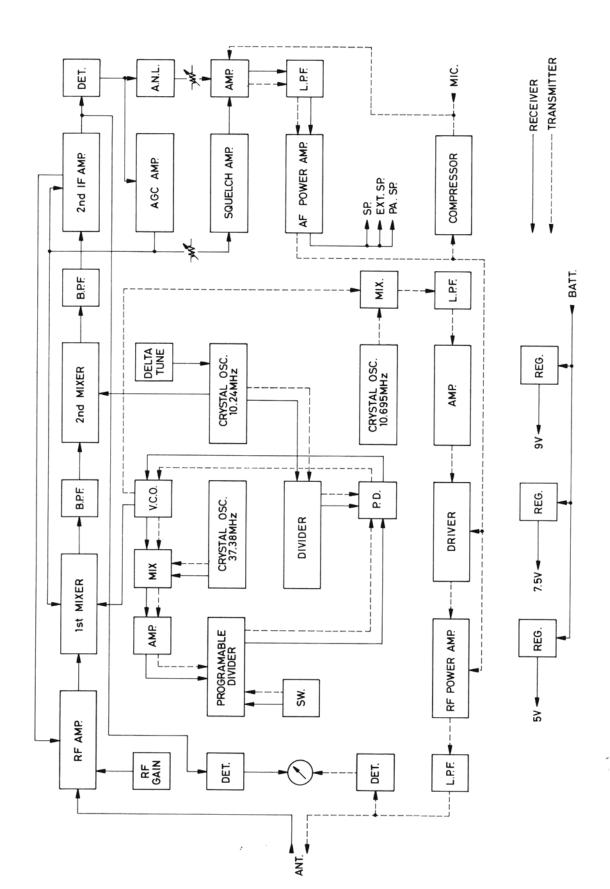

# I-655 Voltage Chart

		Vb (V)		Vc	(V)	Ve	(V)	
		RX	TX	RX	TX	RX	TX	
Q101	2SC1856	1.6	0	7.0	0	0.9	0	
Q102	2SC710C	1.2	0	7.9	0	0.7	0	
Q201	2SC711E	0.6	0	4.6	0	0	0	
Q202	2SC711E	1.2	0	2.1	0	0.6	0	
Q203	2SC711D	0.7	0	4.5	0	0	0	
Q204	2SA695D	4.5	0	0	0	5.1	0	
Q205	2SB620D	0.7	0	0	0	0	0	NO SQUELCH
		0.1	0	2.1	0	0	0	SQUELCH
Q206	2SC945Q	0.1	0	2.1	0	0	0	NO SQUELCH
		0.7	0	0.1	0	0	0	SQUELCH
Q207	2SC945Q	2.5	0	8.6	0	1.9	0	
Q301	2SB561B		0~ − <del>*</del>				0	** MIC INPUT LEVEL $0\sim 100 \text{mV}/600\Omega$
Q302	2SC711E	1.2	1.2	11.9	11.9	0.5	0.5	NO SQUELCH
		1.1	1.2	13.3	11.9	1.4	0.5	SQUELCH
Q401	2SC1908	2.1	1.8	13.8	13.8	8.6	1.3	
Q402	2SC1728		_	12.7	12.7		_	
Q403	2SC756A(2)		ann.	12.7	12.7		_	

	PIN NO	1	2	3	4	5	6	7	8	9	10	11	
Ω303	AN315	V 5.7	0	1.2	6.9	10.7	5.7	0	5.7	5.7	13.0	13.6	

## I-655 Alignment Instruction

#### **RECEIVER**

- A. Inject at the ant. jack a 27.115MHz signal ( $\pm$ .002%; 30% modulation at 1KHz).
- B. Connect an audio voltmeter and oscilloscope across on 8 ohm load and plug into external speaker jack.

Test Equipment	Test Point	Adjust	Remarks
RF signal genera- tor (low range to	Inject at ant. jack	Channel sel to 13	
avoid audio saturation)		T-101, T-102, T-201,	Max. output with vol. control at max, squelch control at min. output should be more than 500mw (2.0v/8 ohm) with gen. voltage at $1\mu V$ ; S & N/N= more than 10dB on all channels

#### AGC RESPONSE

Set the output voltage of a signal generator at  $50000\mu V$  and adjust the volume control so that the voltmeter output is 500mW (2.0v/8 ohms). Then, lower the output voltage of the generator so that the voltmeter output is 10dB down. The output voltage of the signal generator should be under  $5\mu V$  at this time.

#### **AUDIO POWER CHECK**

With a generator output of 1mV and squelch control at minimum, audio output should be more than 4w (5.7v/8 ohm) at maximum position of volume control.

#### **TRANSMITTER**

- A. Power Supply -13.8VDC.
- B. Use a suitable power meter, non-inductive dummy load and oscilloscope connected to antenna jack.

Test Equipment	Test Point	Adjust	Remarks			
1. Power Meter	antenna jack	T-401, T-402, L-403, L-404,	Adjust for maximum output power			
2. Freq. Counter	across dummy load		Check all channels ± 800Hz			
3. A.F. Oscillator	Inject at mic		- 90% modulation on oscilloscope			
with AF voltmeter in shunt (1KHz 10mV)	input		Reduce AF oscillator output to 5mV; modulation $\geq$ 50%			

#### **SPECIFICATIONS**

1-655

#### **GENERAL**

1. Semiconductors : 25 transistors, 24 diodes and 4 integrated circuits.

(3 CMOS IC'S)

2. Self-Contained Speaker : 3 inch, 8 ohm voice coil.

3. Microphone : Dynamic microphone with push-to-talk switch, 500 ohms.

4. Controls, Indicators and : Volume control with power on-off switch.

Connectors : Variable Squelch Control.

: Channel Selector.

: Illuminated Channel Indicator.

: Variable Fine Tuning Control.

: Pushbutton A.N.L.

: Pushbutton PA-CB.

: Pushbutton RF Gain.

: Coaxial type antenna connector.

: External Speaker Jack.

: Public Address Speaker Jack.

: Microphone Connector.

5. Power Supply : 13.8 Volts DC (positive or negative ground). 6. Cabinet Description

: Plastic front with chrome plating and vinyl coated

metal cabinet.

7. Dimensions :  $7-9/16W \times 2-3/8H \times 8-13/16D$ .

RECEIVER

1. Frequency Range (MHz) : 26.965-27.255.

2. Sensitivity : 0.5 uV for 10 db S + N/N. : 5KHz minimum at 6db down. 3. Selectivity

4. Adj. Channel Rejection : More than 60db.

5. Audio Power output at 8 ohms : More than 4W at 10% distortion.

6. Audio fidelity (1KHz = Odb, : 400Hz-2,000Hz.

6db down)

7. A.G.C. figure of merit : More than 80 db.

(input 94db for 10db range)

8. Squelch sensitivity (Threshold) : Less than 0.5uV.

9. Spurious Rejection : More than 45 db.


**TRANSMITTER** 

1. Frequency Range (MHz) : 26.965-27.255. 2. RF Output Power : 4W average.

3. Modulation Capability : 100%

4. Spurious Suppression : More than 50db.

5. Frequency Tolerance  $: \pm 0.005\%.$ 

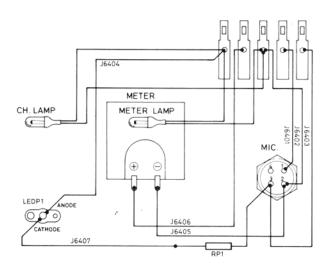

#### 1-655 SERVICE NOTES

- 1. After localizing a defective module, it will be necessary to remove the module top support metal before the module can be extracted (see Figure 1).
- 2. Take particular care in desoldering and resoldering on the main chassis. Engineering tests indicate an average of five solderings before damage results to the foil patterns.
- 3. If it becomes necessary to remove boards U1 or U2, it is also necessary to remove the entire speaker assembly on some models.
- 4. The PLL oscillator module is not designed as a field-serviceable unit. Parts will not be made available, so please do not attempt repair. Return defective modules for replacement.