


COBRA 2000

MOD KIT FOR C.A.P. CHANNELS

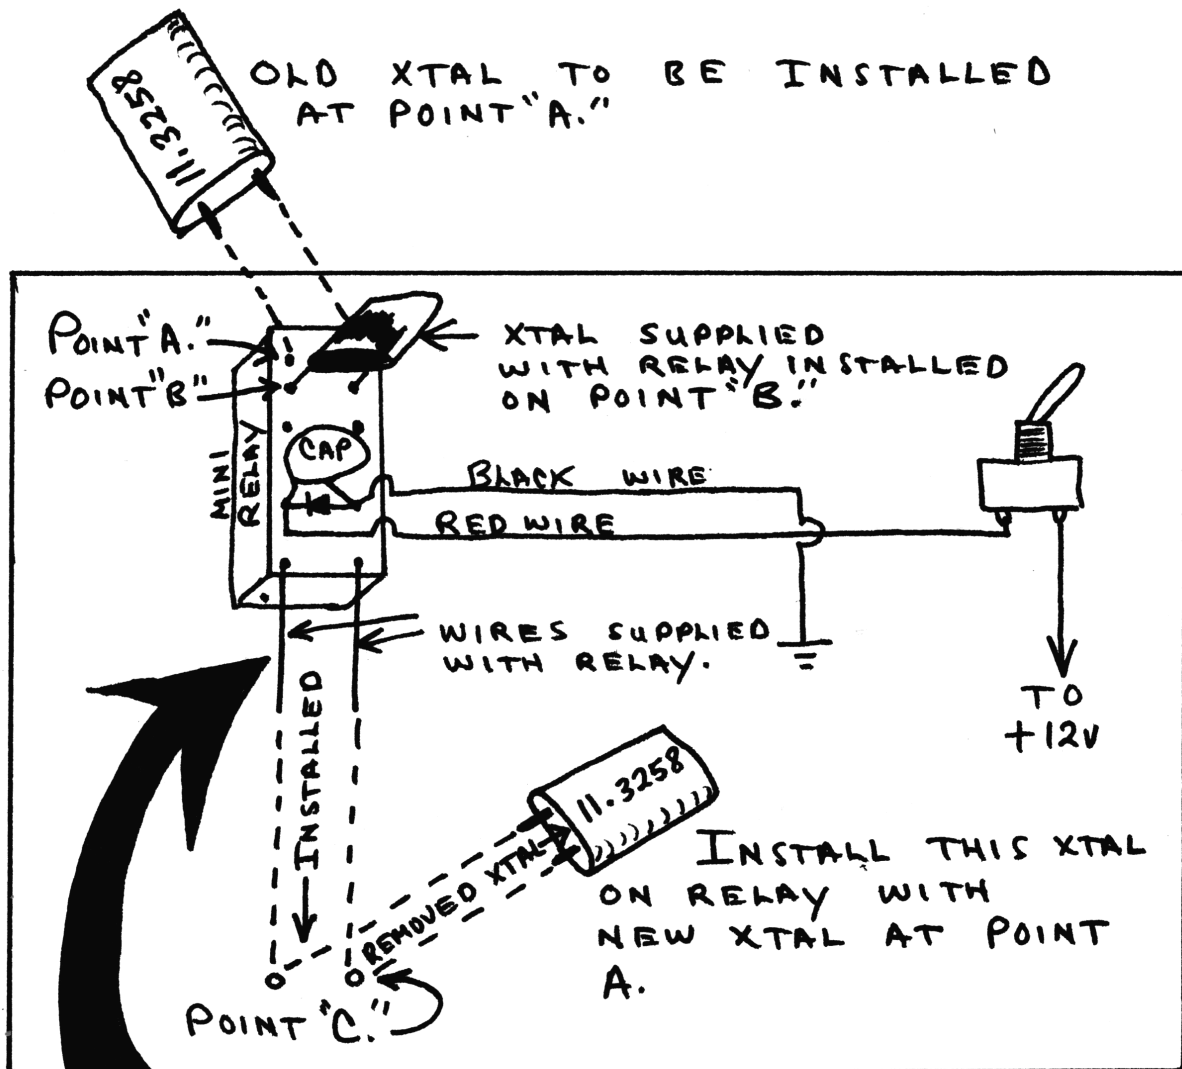

IMPORTANT

DO NOT MOUNT RELAY ASSEMBLY OVER 1 INCH FROM ORIGINAL XTAL LOCATION. KEEP LEADS SHORT!

INSTRUCTIONS:

- ① REMOVE XTAL 11.3258 FROM PC BOARD AND INSTALL ON BLANK CONTACTS AT POINT "A."
- ② INSTALL RELAY ASSEMBLY AS SHOWN AT POINT C.