


NESCO 1249 CHANNEL CONVERSION

- 1-For increase in modulation remove Q201 from PC Board.
- 2-For best power band adjust L406 & L401 for maximum output while set for channel 10. Be sure to check for forward MOD.
- 3-Frequency MOD as shown. NOTE: Pin 3 is connected to pin 16 On foil side of the PC Board pin 3 must be cut free.

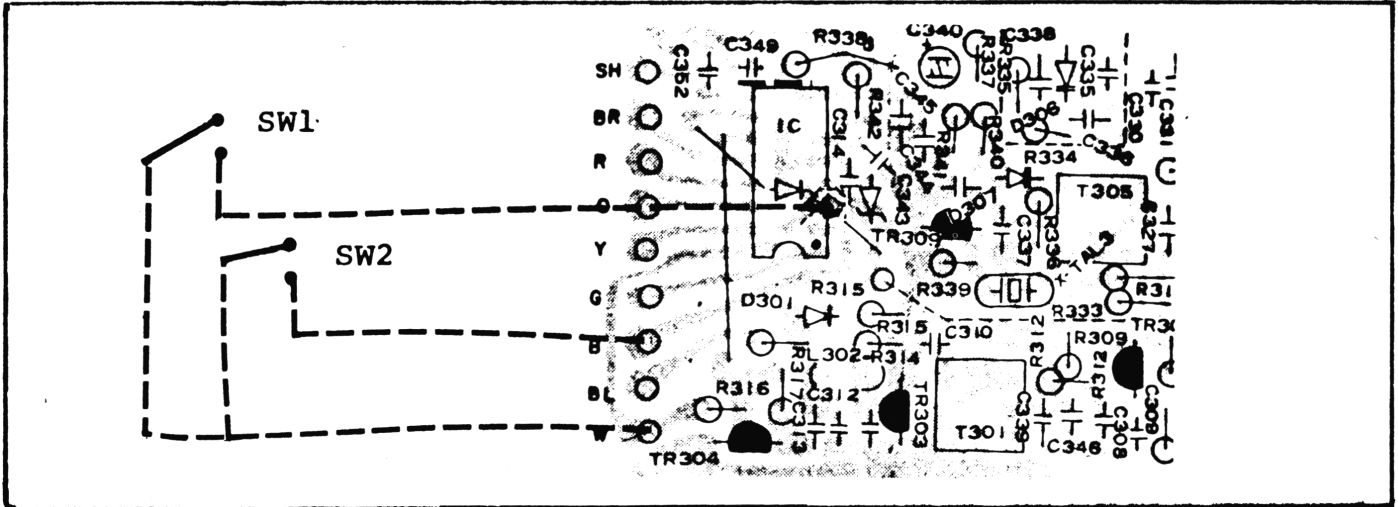

HIGH FREQUENCIES		LOW FREQUENCIES		LOW FREQUENCIES	
SW1 & SW2 ON		SW2 OFF	SW1 ON	SW2 OFF	SW1 ON
CHANNEL	FREQUENCY	CHANNEL	FREQUENCY	CHANNEL	FREQUENCY
12	27.425	1	26.645	17	26.845
13	27.435	2	26.665	18	26.855
14	27.445	3	26.665	19	26.865
15	27.455	4	26.685	20	26.885
16	27.475	5	26.695	21	26.995
17	27.485	6	26.705	22	26.905
18	27.495	7	26.715	23	26.935
19	27.505	8	26.735	24	26.915
20	27.525	9	26.745	25	26.925
21	27.535	10	26.755	26	26.945
22	27.545	11	26.765	27	26.955
23	27.575	12	26.785		
24	27.555	13	26.795		
25	27.565	14	26.805		
26	27.585	15	26.815		
27	27.595	16	26.835		