



I. AM MODULATED CARRIER

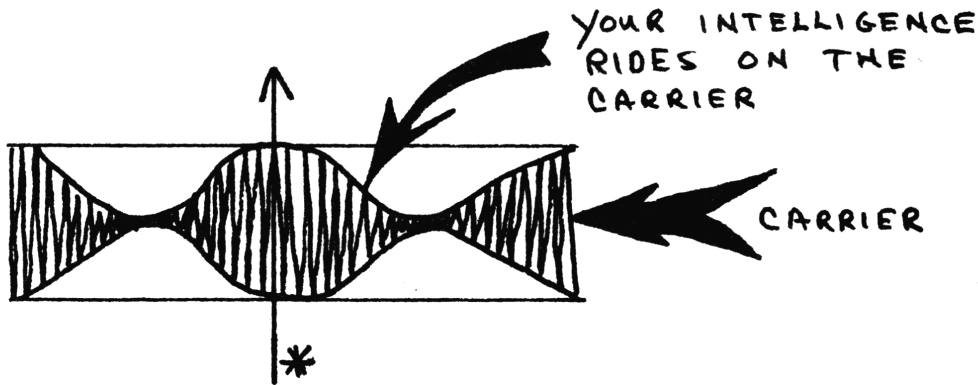

ARROW POINTS WHERE YOU WILL HAVE STRENGTH IN AN AM SIGNAL. ADDING POWER WILL HELP - ALSO SPEECH PROCESSING.


II. FM CARRIER WITH DEVIATION

NO REAL HELP HERE, 5KHZ DEVIATION IS USUALLY ALL THAT IS ALLOWED.

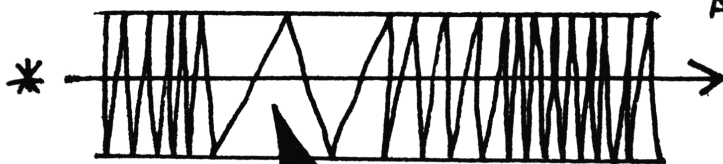

YOUR INTELLIGENCE RIDES HERE BY A CHANGE IN FREQUENCY (DEVIATION)

III. SINGLE SIDE BAND

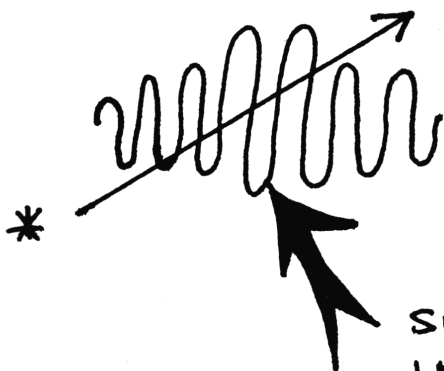

SINGLE SIDEBAND IS PURE INTELLIGENCE. ECHO BOX HELP IN THIS CASE (SEE NEXT PAGE.)

* —————> DENOTES WHERE STRENGTH SHOULD BE APPLIED OR WHERE YOUR EFFORT TO GET MORE POWER SHOULD BE APPLIED.