


# PANASONIC RJ3600

- 1) Locate UPD861 IC PLL chip, Pin 7.
- 2) Obtain two SPDT switches.
- 3) Solder a wire from Pin 7 to one side of switch A
- 4) Jump the center posts together and run a wire to TM3
- 5) Connect one end of switch "B" to where D25 was. (D21, 22, 24, 25, are removed).

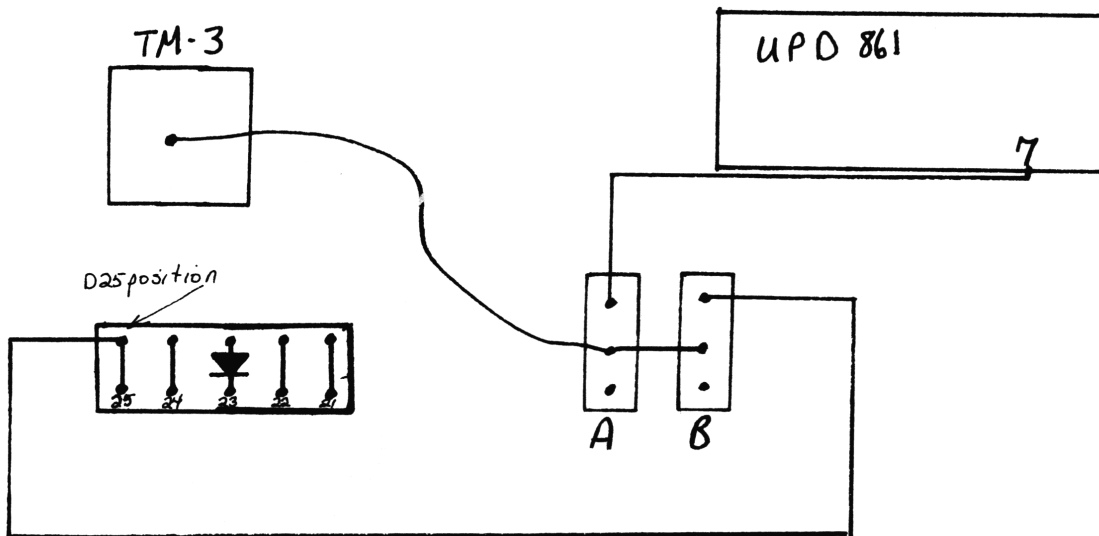

A DOWN; B UP - Regular Channel  
A UP; B UP - Up to 27.595  
A UP; B DOWN - 26.645 to 26.805  
A DOWN; B DOWN - 26.425 to 26.765