


HINTS ON SERVICING

When servicing a "wireless-modular" radio such as the Royce 655, you will find troubleshooting of a particular module alot easier if you unsolder the terminal pins, remove the module and solder the pins on the other side of the "mother board" in the same direction. Now you have lots of room to work.

FREQUENCY METER HOOK-UP

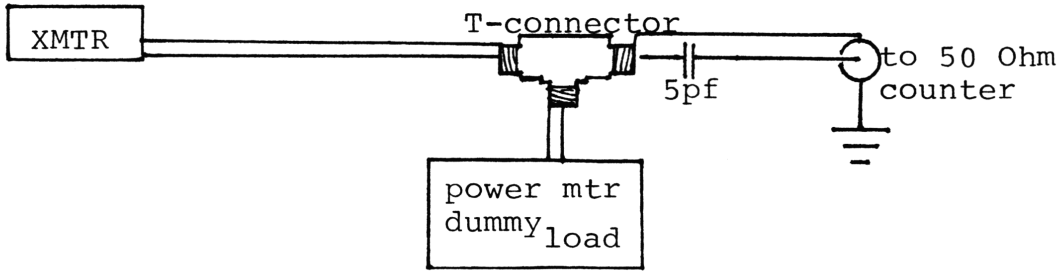

Use this for high impedance counter

