


SPECIFIC RADIO TUNE-UPS cont'd.:


ITT CB-4000M

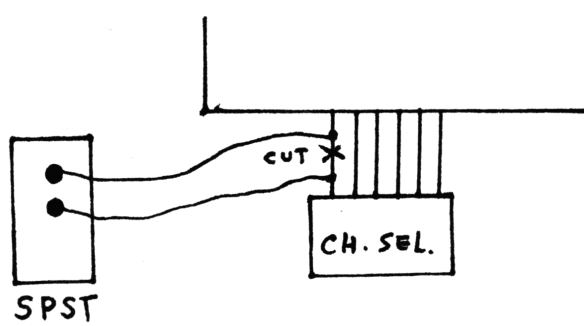

Cut #1 wire as shown and add switch. This gives Channels 41-59.

J.C. PENNEY 6246 (PLL 6055)

Connect and wire a SPDT Center Off Switch as shown:

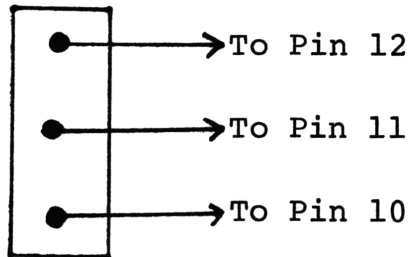

Top position gives 27.415 - 27.435.
Center Position is Normal.
Bottom Position gives 27.445 - 27.595.

JOHNSON 4125/4174

Locate the PLL Chip and the PC trace as shown below. Make and break trace with a SPST Switch.

