


Uniden PC-33; CARD KIT 'B' Installation


by B.F.

Use both diagrams below for installation procedure of Fo Mod., and +5KHz jump switch.

Fo Mod - Cable Hook-ups.... INSTALL AT COMPONENT SIDE

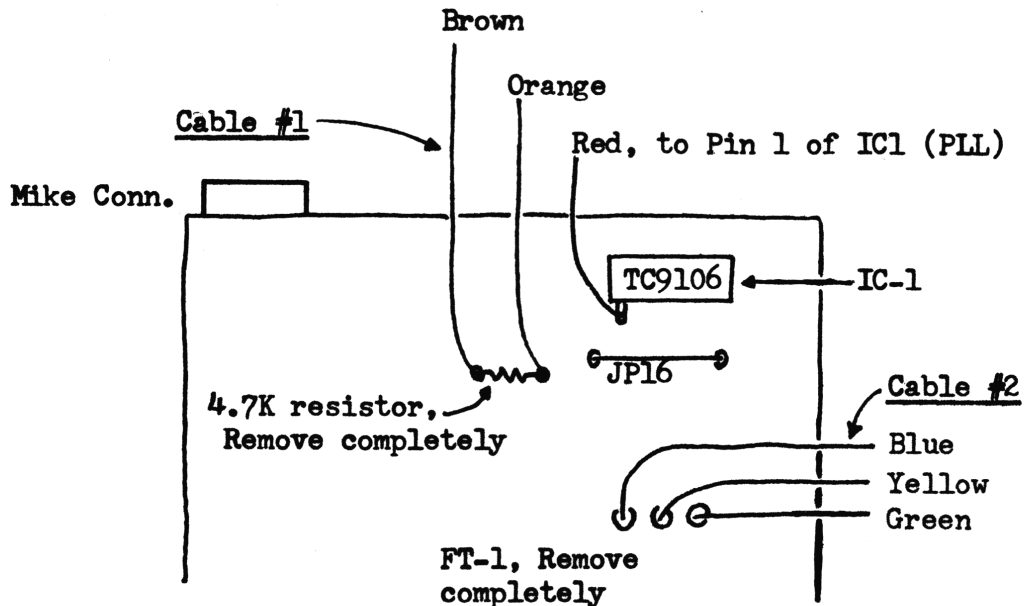

+5KHz Jump Mod - Switch hook-up, or rewire if needed as shown with different type.
ETCH SIDE SHOWN BELOW.

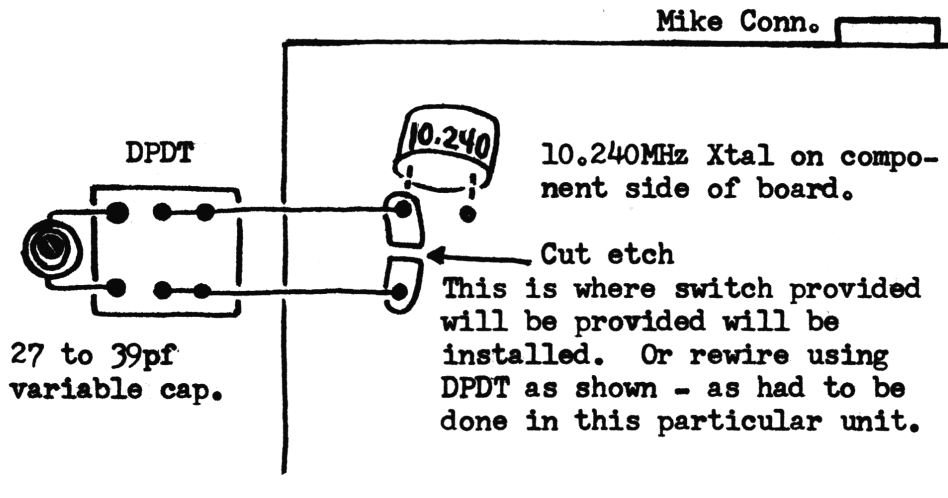

Use Vol. 19, page 40 for realignment/tune-up procedure.

Will give a nice clean operating radio.