

# THE C TEAM

## Clarifier Pots with "Center Notch" - REMOVAL

Carefully bend up the tabs on pot cover, slide off the top.  
Remove the metal tab with raised notch, then re-assemble the pot.  
This is the same method for the 148GTL-DX and Jackson clarifier pots.

---


---

### SuperStar 360FM Clarifier Mod.


For those who don't like the split operation of RX/TX, or in most cases don't know how to operate.

Use drawings below and re-wire new 20K linear pot to make a standard 'Slider'.

.... Remove all wires from original pot; remove all the wires from PCB; WITH THE EXCEPTION OF YELLOW WIRE-LEAVE.....

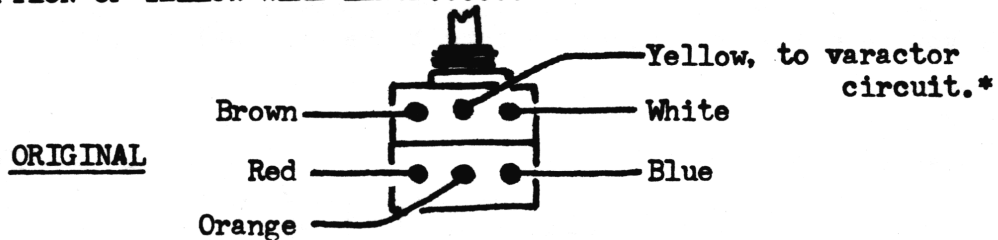

.... Rewire new pot as below; center pot/knob; realign circuitry for AM/FM: Center Fo.; USB +1.5KHz of Center Fo.; LSB -1.5KHz of Center Fo.

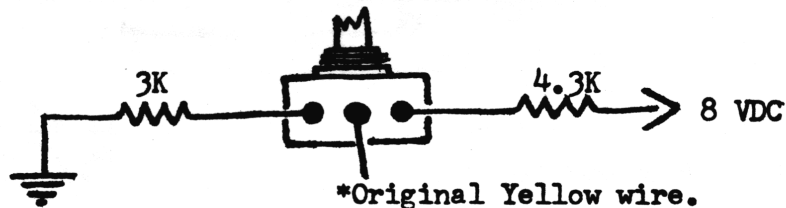

---

Original wire locations: Red - Fine (L)  
Org - Fine (M)  
Blue - to RX on PCB, another wire is located in same location but different hole.  
White - COSE (H)  
Yellow - COSE (M)  
Brown - COSE (L)