


# THE C TEAM

## Modifying the SuperStar 3600 (Lo Band) 'Slide'

Remove middle front wire off Clarifier pots (Violet wire), then take the dual pot out of chassis. Remove all remaining wires from the PCB.


Wire up a new 20K Linear taper pot as shown below, no resistors are needed to offset ground and B+.

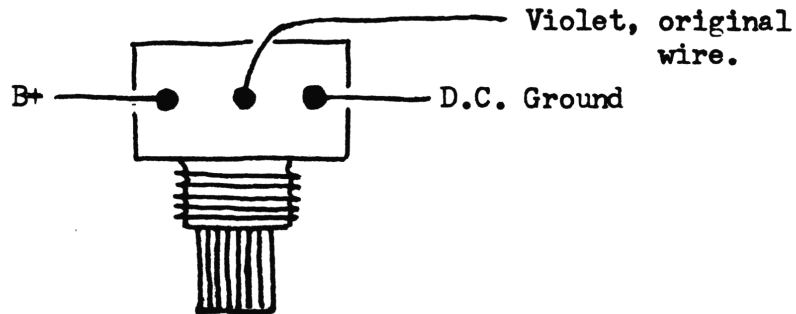

Above configuration gave approximately  $\pm 6$  KHz after centering and realignment.

---

If you are going to replace the original or forget the wiring.....

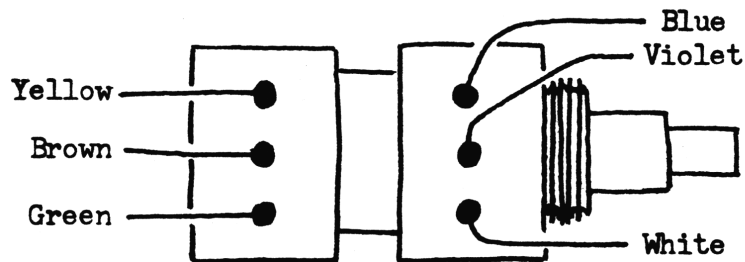

Blue - no numbered hole, next to where R192 should be but isn't.

Violet - #50 on PCB

White - #52 on PCB

Yellow - #51 on PCB

Brown - # 53 on PCB

Green - #54 on PCB