



Major M-120, 'ALPHA' (cont.)

21. Rejection Was A Problem! Remove the 455KHz filter (CF2); obtain another from local electronics outlet; or from a 'junked' out C.B.
22. Glue or tape the two filters together, then re-wire as below.

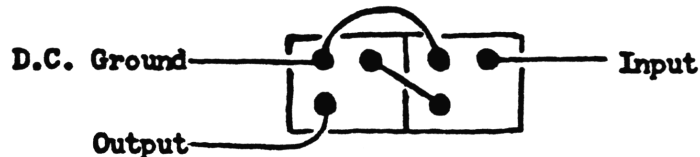

23. Carefully reinstall the new filter on the component side in the cleaned out holes as follows below:

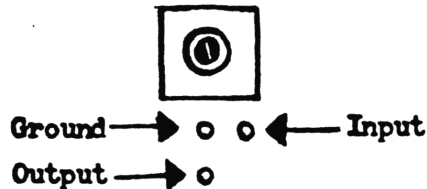

ICOM 735, Full TX Coverage
G.L.

"A Beauty of a Unit!" Carefully follow directions for full TX coverage:

1. Remove Top cover.
2. VERY CAREFULLY, remove P.A. unit and lean to one side.
3. Approximately 2" from front center and 'hair' to left, you will find D34 and D35.
4. Carefully remove or clip.
5. Replace the P.A. unit being careful not to pinch any wires.
6. Replace the top cover.

Unit will now transmit over the entire readout range.....