


148GTL-DX (LATE)
Rotary Switch Modification

Below is modification I use on the 148-DX; it allows a frequency coverage of: 25.745-28.245MHz.

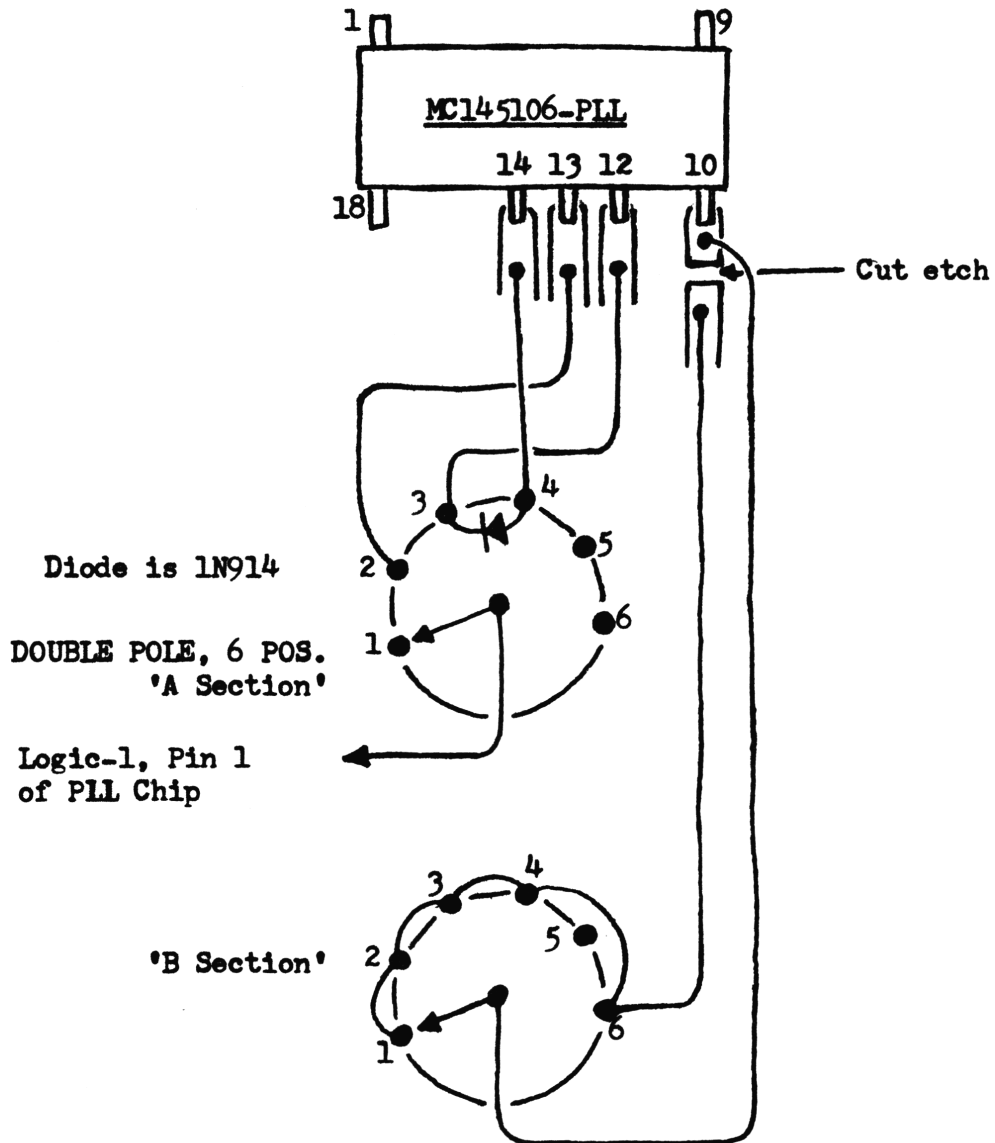

- Pos. 1 - Range Switch Lo/Med/Hi; original frequencies.
- Pos. 2 - Range Switch Hi; 27.865-27.925MHz, selector pos. 23-31
- Pos. 3 - Range Switch Hi; 27.935-28.175MHz, selector pos. 17-40
- Pos. 4 - Range Switch Hi; 28.185-28.245MHz, selector pos. 33-40
- Pos. 5 - Range Switch Hi; 26.135-26.575MHz, selector pos. 1-40
- Range Switch Mid; 25.745-26.125MHz, selector pos. 6-40
- Pos. 6 - Same as Position 1